
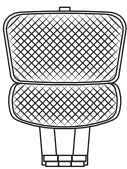
 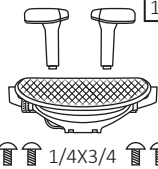
 




ERGOHUMAN 2 ULTRA BLACK

A	 1x	B	 1x 1/4x3/4	C	 1x	D	 1x	E	 3x M10X24	F	 1x
PDH								G	 5x		

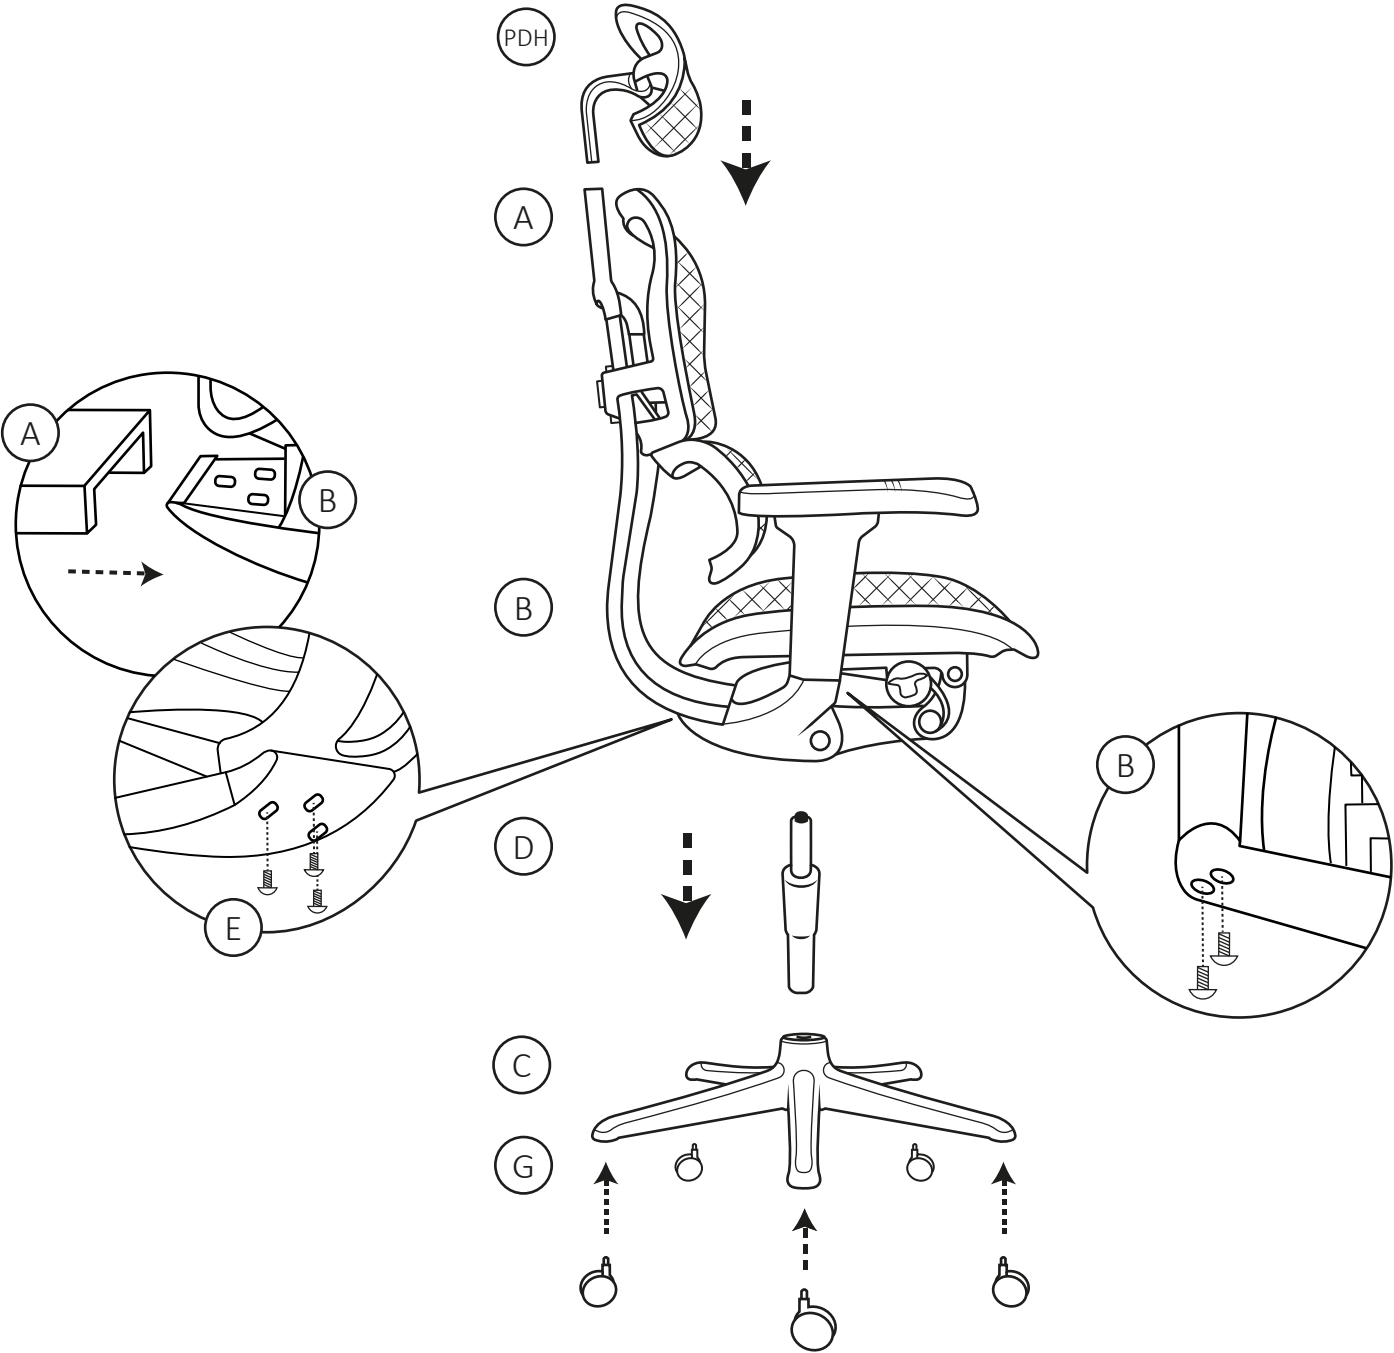


ERGOHUMAN 2 ULTRA BLACK



PDH Headrest height and angle adjustment

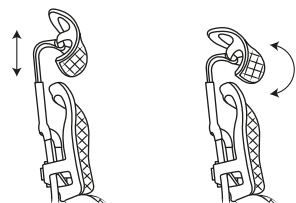


A1 Armrests 5D adjustment

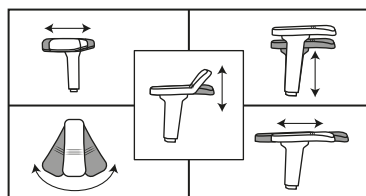

01 Seat height adjustment

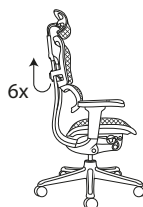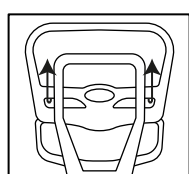


02 Lumbar support adjustment

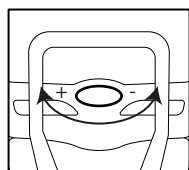


L1 Seat angle adjustment




P1 Seat depth adjustment

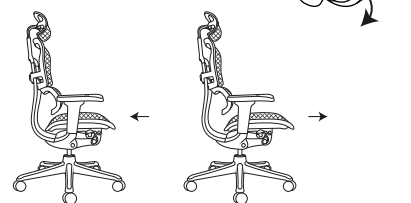

P2 Backrest-Seat angle adjustment

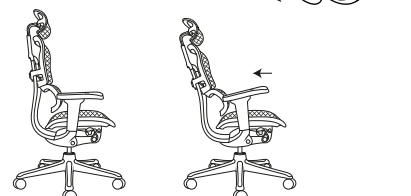

P3 Seat height adjustment

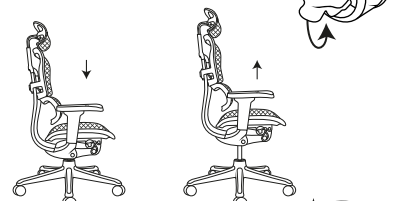

P4 Backrest tension adjustment



MAINTENANCE

Maintenance of upholstery is carried out by wiping off dirt and spots with a damp cloth; in case of leather or leatherette please use a slightly watery cloth.

Warranty period is 36 months. During the warranty period, the manufacturer will replace free of charge all parts that have been damaged due to material defects or manufacturing errors. In these cases, the manufacturer replaces defective parts, not the entire chair.

The warranty does not cover damages caused by:

1. Transportation (damages are the responsibility of the carrier)
2. Natural disasters
3. Incorrect assembly
4. Careless and inappropriate use
5. Non-compliance with the provided instructions

